

### DESCRIPTION

The EV2632-R-01A is the evaluation board designed to demonstrate the capabilities of MPS' MP2632, a highly-integrated, flexible switch-mode battery charge management for a single-cell Li-ion and Li-Polymer battery used in a wide range of applications.

EV2632 uses two operating modes—charge mode and boost mode—to allow management of system and battery power based on the state of the input.

When input power is present, the board charges a single-cell battery with a programmable charge current of up to 3A.

In the absence of an input source, the board switches to boost mode through the PB pin to power the SYS pins from the battery with a current of up to 3A.

The evaluation board provides 4-LED to achieve the voltage based fuel gauge indication and distinguish charge mode from boost mode.

To guarantee safe operation, the EV2632 has input-over-voltage protection, battery over-voltage protection, thermal shutdown, battery-temperature monitoring, and a programmable timer to prevent prolonged charging of a dead battery.

### ELECTRICAL SPECIFICATION

| Parameter                | Symbol           | Value             | Units |
|--------------------------|------------------|-------------------|-------|
| <b>Charge Mode</b>       |                  |                   |       |
| Input Voltage Range      | $V_{IN}$         | 4.65 – 6          | V     |
| Charge-Full Voltage      | $V_{BATT\_Full}$ | 4.2 / 4.35 / 4.45 | V     |
| Charge Current           | $I_{CHG}$        | 3                 | A     |
| Input Current Limit      | $I_{IN\_LIM}$    | 2.7               | A     |
| <b>Boost Mode</b>        |                  |                   |       |
| Battery Voltage          | $V_{BATT}$       | 3-4.5             | V     |
| SYS Voltage Regulation   | $V_{SYS}$        | 5                 | V     |
| SYS Output Current Limit | $I_{SYS}$        | 3                 | A     |

### FEATURES

- 4.65V-to-6V Operating Input Voltage Range
- Power Management Function Integrated Input-Current-Limit and Input Voltage Regulation
- Up to 3A Programmable Charge Current
- Selectable 4.45V / 4.35V / 4.2V Charge Voltage with 0.5% Accuracy
- Battery Temperature Monitoring
- 4-LED for battery fuel gauge indication
- Programmable Timer Back-Up Protection
- Battery-Reverse-Leakage Blocking
- Reverse-Boost-Operation for Powering System
- Up to 94% 5V Boost Mode Efficiency @ 3A with BATT=4.5V
- Up to 3A Programmable Output Current Limit in Boost Mode

### APPLICATIONS

- Sub-battery Applications
- Power-bank Applications for Smart-Phone, Tablet and Other Portable Devices

All MPS parts are lead-free, halogen free, and adhere to the RoHS directive. For MPS green status, please visit MPS website under Quality Assurance.

"MPS" and "The Future of Analog IC Technology" are Registered Trademarks of Monolithic Power Systems, Inc.


## EV2632-R-01A EVALUATION BOARD



(L x W x H) 2.5" x 2.5" x 0.063"  
(6.35cm x 6.35cm x 0.16cm)

| Board Number | MPS IC Number |
|--------------|---------------|
| EV2632-R-01A | MP2632GR      |

## EVALUATION BOARD SCHEMATIC

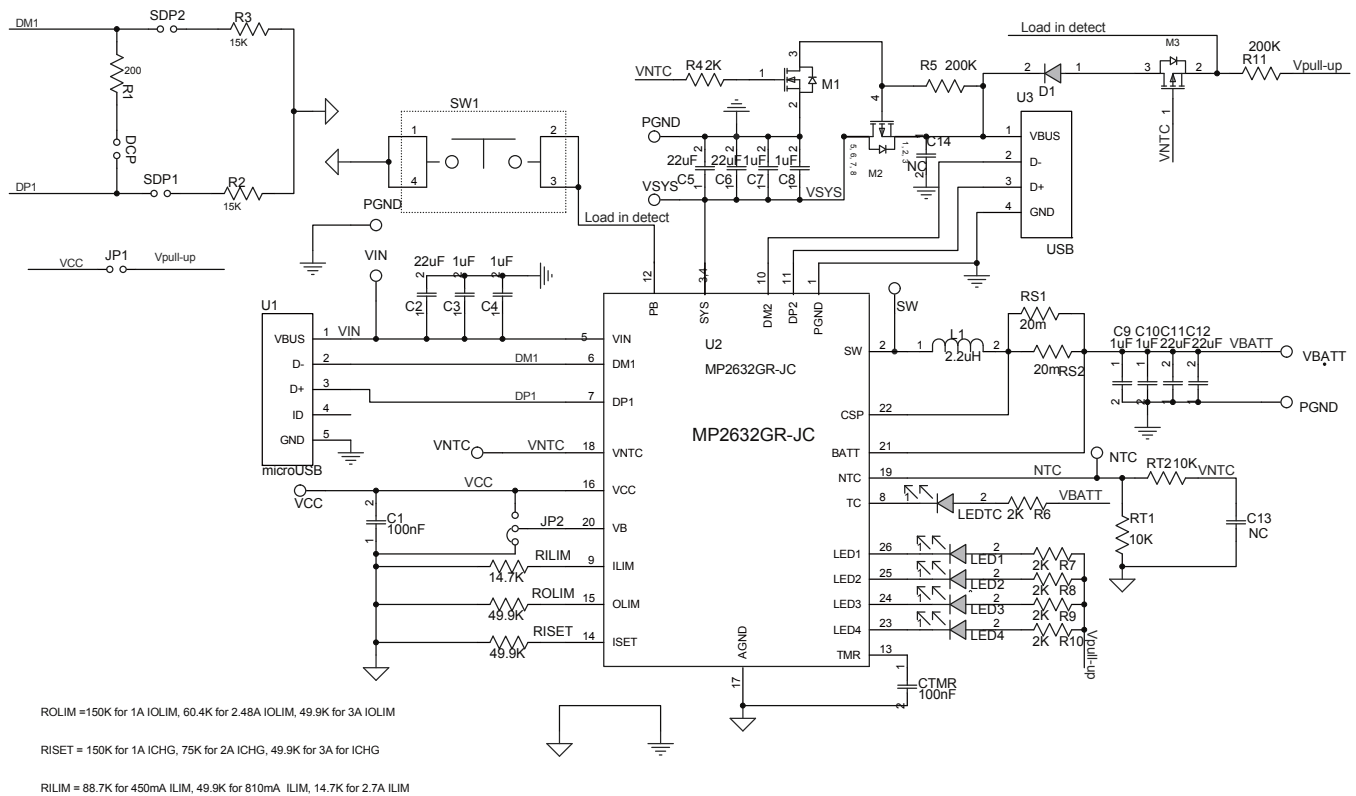

## EV2632-R-01A BILL OF MATERIALS

| Qty | Ref                              | Value                 | Description                    | Package   | Manufacture  | Manufacture_PN    |
|-----|----------------------------------|-----------------------|--------------------------------|-----------|--------------|-------------------|
| 1   | R1                               | 200                   | Film Resistor;1%               | 0603      | Yageo        | RC0603FR-07200RL  |
| 2   | R2, R3                           | 15k                   | Film Resistor;5%;              | 0603      | Yageo        | RC0603JR-0715KL   |
| 6   | R4, R6, R7, R8, R9, R10          | 2k                    | Film Resistor;5%               | 0603      | Yageo        | RC0603JR-072KL    |
| 1   | R5,R11                           | 200k                  | Film Resistor;5%               | 0603      | Yageo        | RC0603JR-07200KL  |
| 2   | RS1, RS2                         | 20m                   | Resistor;1%;                   | 2512      | Yageo        | RL2512FK-070R02L  |
| 2   | RISET, ROLIM                     | 49.9k                 | Film Resistor;1%               | 0603      | Yageo        | RC0603FR-0749K9L  |
| 1   | RILIM                            | 14.7k                 | Film Resistor;1%               | 0603      | Yageo        | RC0603FR-0714K7L  |
| 2   | RT1, RT2                         | 10k                   | Film Resistor;5%;              | 0603      | Yageo        | RC0603JR-0710KL   |
| 2   | C1, CTMR                         | 100nF                 | Ceramic Capacitor;16V;X7R;0603 | 0603      | TDK          | C1608X7R1C104K    |
| 5   | C2, C5, C6, C10, C12             | 22μF                  | Ceramic Capacitor;25V;X5R;     | 1206      | muRata       | GRM31CR61E226KE15 |
| 6   | C3, C4, C7, C8, C9, C11          | 1μF                   | Ceramic Capacitor;25V;X7R      | 0603      | TDK          | C1608X7R1E105K    |
|     | C13, C14                         | NC                    |                                |           |              |                   |
| 1   | LEDTC                            | CB-482QWC             | LED; WLED,20mA,                | DIP2      |              |                   |
| 4   | LED1, LED2, LED3, LED4           | BL-HGE35A-TRB         | LED; Green                     | 0805      | BRIGHT LED   | BL-HGE35A-TRB     |
| 1   | D1                               | B130LAW               | Schottky;30V;1A                | SOD-123   |              | B130LAW-7         |
| 1   | M1                               | AM2336N               | N-Channel MOSFET; 30V;         | SOT-23    | Analog Power | AM2336N           |
| 1   | M2                               | AM4825P-T1            | P-Channel MOSFET; -30V;        | SO-8      | Analog Power | AM4825-T1-PF      |
| 1   | M3                               | AM2305                | P-Channel MOSFET, 20V          | SOT-23    | Analog Power | AM2305PE-T1       |
| 1   | L1                               | 2.2μH                 | Inductor;2.2uH;0.173m;8.2A     | SMD       | TDK          | SPM6530T-2R2M     |
| 1   | SW1                              | Push Switching button | Button; SM 4x10mm;1.5mm Height |           |              |                   |
| 1   | U1                               | Micro-USB receptacle  |                                |           |              |                   |
| 1   | U2                               | MP2632                | IC                             | QFN26 4*4 | MPS          | MP2632GR          |
| 1   | U3                               | USB A-type receptacle |                                |           |              |                   |
| 6   | VIN,PGND, VBATT, PGND,VSYS, PGND |                       | 2mm terminal                   |           |              |                   |
| 4   | DCP, JP1, SDP1, SDP2             |                       | Jumper, 2.54mm                 |           |              |                   |

# PRINTED CIRCUIT BOARD LAYOUT (1)

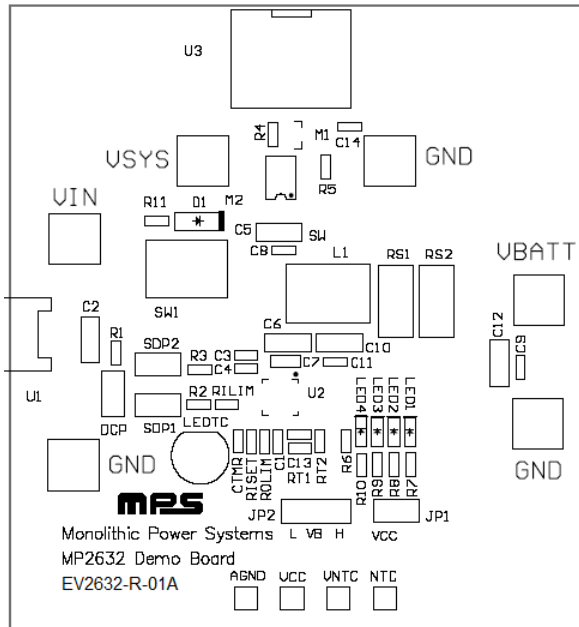


Figure 1: Top Silkscreen Layer

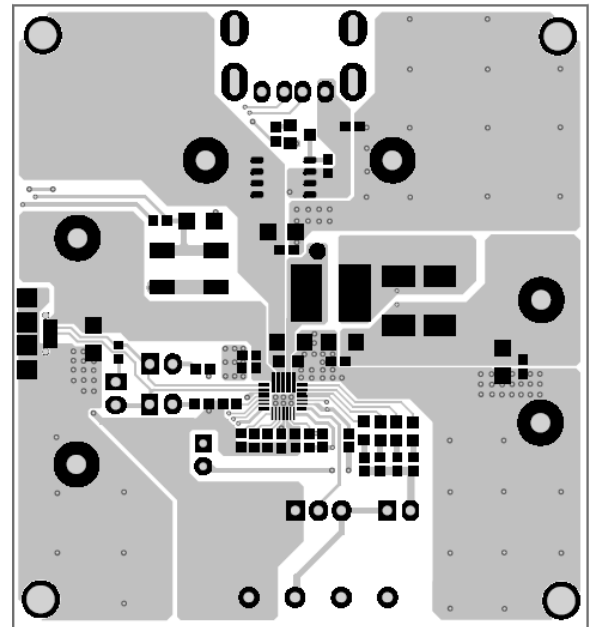


Figure 2: Top Layer

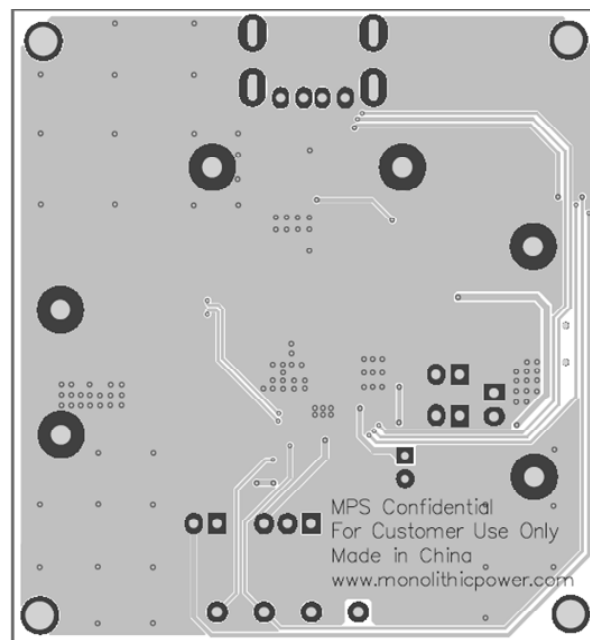


Figure 3: Bottom Layer

## NOTE:

- EV2632-R-01A is modified from EV2632-R-00A by adding M3 manually, so the PCB layout has no difference of the two boards.

## QUICK START GUIDE

This board is designed for the MP2632, a stand-alone switch-mode battery charge management and system power path management device with integrated reverse directional boost from BATT to SYS. The board layout accommodates most commonly-used capacitors. The default function of this board is preset at charge mode, and the charge full voltage is preset to 4.35V for a 1-cell Li-Ion battery.

### Charge Mode Setting

#### 1. Input Current Limit

An input current limit can be set slightly below the input source's maximum current rating. When the input current hits this limit, the charge current will decrease to keep the input current constant at the limit value to initially power the system.  $R_{ILIM}$ —the resistor connected to the ILIM pin—programs this limit. To set the input current limit at 2.7A, use a  $R_{ILIM}$  of 14.7k $\Omega$ .

$$I_{ILIM}(A) = \frac{40(k\Omega)}{R_{ILIM}(k\Omega)} \quad (1)$$

#### 2. Charge-Full Voltage

To set the charge-full voltage, leave the VB pin floating for 4.2V, connect VB to L for 4.35V and connect VB to H for 4.45V.

#### 3. Charge Current

The charge current can be programmed via both RS1 and  $R_{ISET}$ . With given RS1=10m $\Omega$ , determine the charge current using the following formula:

$$I_{CHG}(A) = \frac{1500}{R_{ISET}(k\Omega) \times RS1(mA)} \quad (2)$$

For example, for a charge current of 3A, use a 49.9k $\Omega$   $R_{ISET}$

### Boost Mode

#### 1. System-Output-Current Limit

Set the system-output-current limit in boost mode for the EV2632 to operate like a standard USB charger. Set the output current limit as the following equation:

$$I_{OLIM}(A) = \frac{1500}{R_{OLIM}(k\Omega) \times RS1(m\Omega)} \quad (3)$$

#### 2. BOOST Automatic On when Load is Applied

The load is applied to the USB port connected to the SYS output which is U3 in the schematic.

To detect the USB load plug in, the RC network (R11,C14) is connected to USB port (U3) shield ( $V_{BUS}$ ). Once the USB load is inserted to the SYS through U3, the USB connector shield is grounded through USB load. So a short pulse (high to Low for >1.5ms) is generated in PB pin, resulting in start of boost operation. M2 is used to decouple USB port from the VSYS cap (C2,  $C_{SYS}$ ), M1 is used to drive the M2. Once the Phone is plugged in, the voltage at C14 will be pulled down because the input cap inside phone is far larger than C14 (even don't need), so that the falling edge will be delivered to PB pin to enable boost automatically. M3 is used to cutoff the PB pin to the USB port when the BOOST is turned on. Then PB pin state will not be affected by the spec of the inserted load of the USB port. Choose M3 with low turning on threshold (-0.7V is recommended) which could make sure it is fully on when the load is inserted and its on resistance will not cause too much voltage drop.

**For the other detailed description on the operation of the MP2632, please refer to the datasheet.**

## EQUIPMENT REQUIREMENT

Evaluation requires the following equipments:

1. DC power source. The output voltage should exceed 6.0V, and output current greater than 3A.
2. Battery simulator or a single-cell battery pack. The battery simulator's output rating should exceed 4.5V/7.0A. When using a real battery pack, please observe all precautions on the battery manufacturer's data sheet first and ensure the charger's setting doesn't exceed the battery's absolute maximum specifications.
3. Oscilloscope. A single voltage probe and a single current probe.
4. Multi-meter.

### Charge Function

1. Connect the jumper "VCC".
2. The jumpers "DCP", "SDP1" and "SDP2" are used for the input DP1/DM1 detection setting. Connect "DCP" and leave "SDP1" and "SDP2" float as default, the DP1/DM1 detection will be set as DCP, the  $I_{INLIMIT}$  is set through  $R_{ILIM}$ .

Otherwise, only connect "SDP1" and "SDP2", or leave the 3 jumpers float will set the  $I_{INLIMIT} = 500mA$ .

3. Attach the positive and negative ends of the battery to the "BATT" and "GND" terminals, respectively. If it's a battery simulator, please preset the voltage to 3.8V (typical value) first.
4. Preset the DC power source to 5.0V. Then attach the DC output port and ground to the "VIN" and "GND" terminals, respectively.
5. Turn on the DC power source. The charger will start. Use the oscilloscope to verify that the 3A charge current is being delivered to the battery.

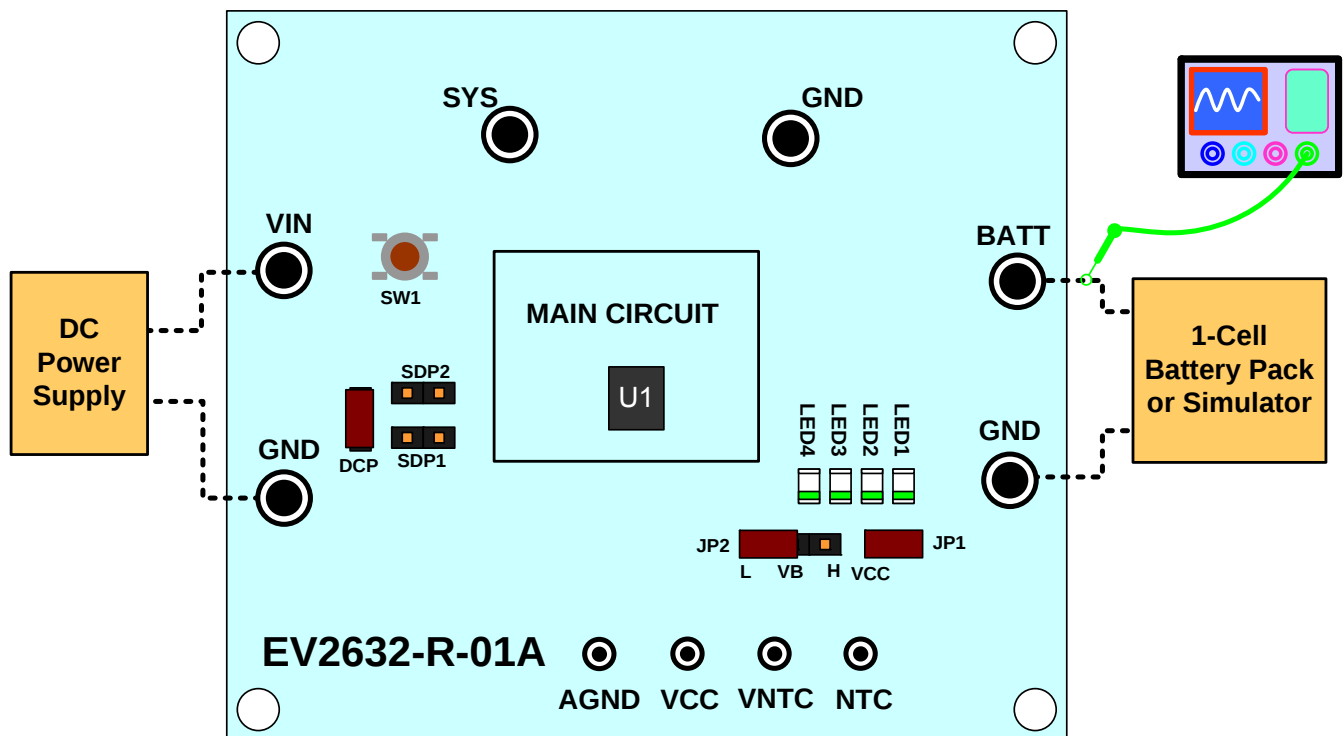


Figure 4: Setup for Charge Mode

## Boost Function

- 1 Attach the load to the “SYS” and “GND” terminals respectively.
- 2 Attach the positive and negative ends of the battery to the “BATT” and “GND” terminals respectively. If it's a battery simulator, please preset the voltage to 3.8V (typical value) firstly.
- 3 Short push the SW1 button, the boost will start to work. Verify the system output current is limited at 3A.

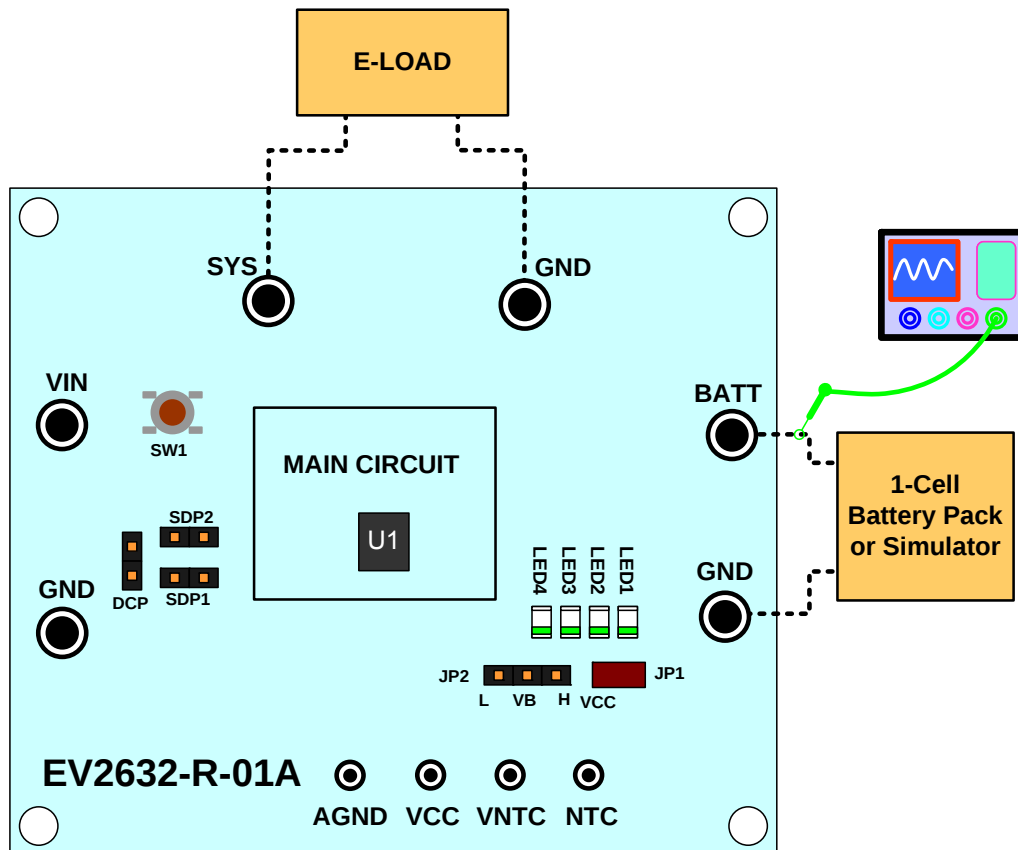


Figure 5: Setup for Boost Mode

**NOTICE:** The information in this document is subject to change without notice. Users should warrant and guarantee that third party Intellectual Property rights are not infringed upon when integrating MPS products into any application. MPS will not assume any legal responsibility for any said applications.